

Figure 16 on Page 31 in this User's Manual has been updated. Please refer to the diagram in this addendum for updated instructions on single speed potentiometer connections.

901 East Thompson Avenue
 Glendale, CA 91201-2011;
 Phone: (800) MINARIK (646-2745)
 Fax: (800) 394-6334
 Document Number 250-0346 Revision 0;
 Printed in the U.S.A. – 12/01

Copyright 2001 by Minarik Corporation - All rights reserved. No part of this document may be reproduced or transmitted in any form without written permission from Minarik Corporation. The information and technical data in this document are subject to change without notice. Minarik Corporation and its Divisions make no warranty of any kind with respect to this material, including, but not limited to, the implied warranties of its merchantability and fitness for a given purpose. Minarik Corporation and its Divisions assume no responsibility for any errors that may appear in this document and make no commitment to update or to keep current the information.

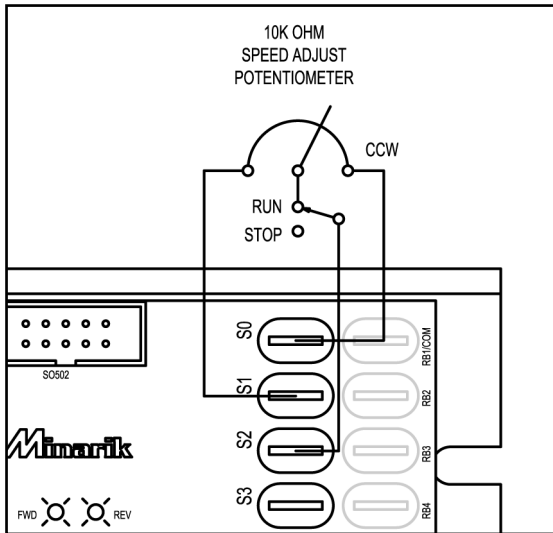


Figure 16. RUN/STOP SWITCH